

What to do if...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



Slip indicator



(Flashes)

Brake hold operated indicator



(Flashes)

(U.S.A.)

Parking brake indicator



(Flashes)

(Canada)



(Canada)

ABS warning light



Brake system warning light



Electric power steering system warning light



(Blinking and then continuously on)

Tire pressure warning light



(Flashes)

Pre-collision system warning light (if equipped)

For further information, refer to the Owner's Manual.

What to do if...

Follow the correction procedures.



Open door warning light



Master warning light



Low fuel level warning light



Tire pressure warning light*

(Illuminates
without
blinking)



Seat belt reminder light

For further information, refer to the Owner's Manual.

*: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

What to do if...

See the Owner's Manual


	Turn signal indicator		Brake hold standby indicator
	Headlight indicator (U.S.A.)		Brake hold operated indicator
	Tail light indicator (Canada)		Cruise control "SET" indicator
	Headlight high beam indicator		Cruise control indicator
	Automatic High Beam indicator		Radar cruise control indicator (if equipped)
	Front fog light indicator		LKA (Lane-Keeping assist) indicator (if equipped)
	"READY" indicator		"HEIGHT HIGH" indicator
	EV indicator		Slip indicator
	EV drive mode indicator		VSC (Vehicle Stability Control) OFF indicator
	Snow mode indicator		BSM (Blind Spot Monitor) outside rear view mirror indicators (if equipped)
	(U.S.A.) Parking brake indicator		Pre-collision system warning light (if equipped)
	(Canada)		"AIR BAG ON/OFF" indicator

For further information, refer to the Owner's Manual.

What to do if...

If the electronic key does not operate properly


■ Unlocking and locking the doors

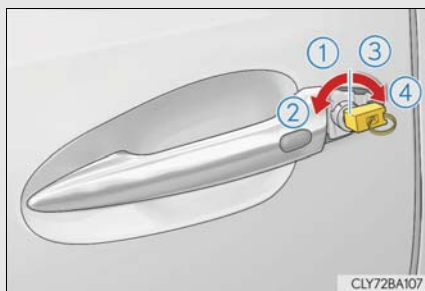

To unlock or lock the vehicle, use the mechanical key to remove the lock cover on the driver's door handle. The mechanical key is stored inside the electronic key.

- ① Locks all the doors
- ② Closes the windows and moon roof (turn and hold)
- ③ Unlocks the door
Turning the key rearward unlocks the driver's door. Turning the key once again unlocks the other doors.
- ④ Opens the windows and moon roof (turn and hold)


■ Unlocking the trunk

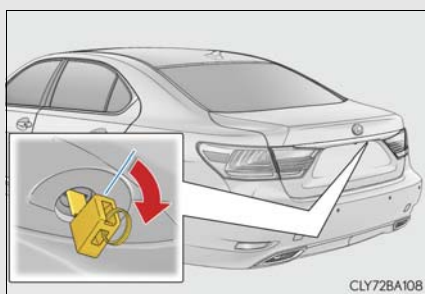

Turn the mechanical key clockwise to open.

What to do if...

Starting the hybrid system

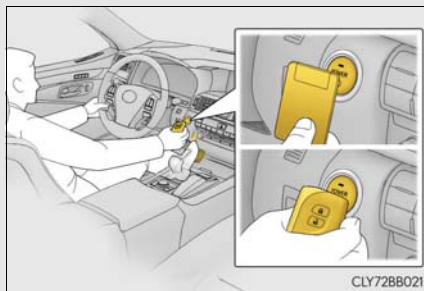

- 1** Ensure that the shift lever is in P and depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the power switch.
If any of the doors is opened or closed after the key was touched to the switch to start the vehicle, an alarm will sound to indicate that the start function cannot detect the key.
- 3** Press the power switch within 10 seconds of the buzzer sounding, keeping the brake pedal depressed.

In the event that the hybrid system still cannot be started, contact your Lexus dealer.

If the electronic key battery is depleted, a warning message will be shown on the multi-information display. Replace the battery with a new one. For instructions on replacing the battery, refer to the "Owner's Manual". If you need further assistance, contact your Lexus dealer.

If the hybrid system does not start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system. (→P.36)

If the hybrid system still does not start, see the "Owner's Manual" for more information or contact your Lexus dealer.